


6. Finished

Now you've completed the installation and setup process. Remember: TrackIR software must be running before starting any TrackIR Enhanced™ titles.

Technical notes


- If using a USB hub with the device, make sure that it is externally powered (plugs into the wall). For best results, do not use a USB hub.
- Windows users must be logged in as an administrator to install the software. If you only have one user set up on your computer, you probably have administrator privileges.
- For further setup information, please view the instruction manual on our website.

Visit www.TrackIR.com today for the latest software, support, videos, events, tips and tricks, and much more!

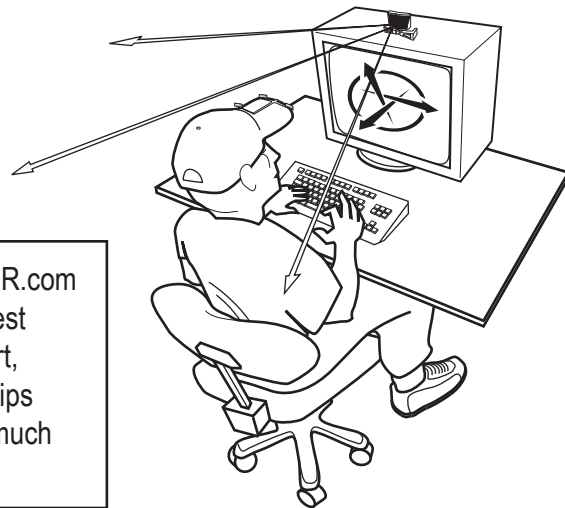

Friendly Customer Support

If you have any difficulties after reading the instruction manual, please visit www.TrackIR.com, or call 1.541.753.6645 between 9AM-5PM PT

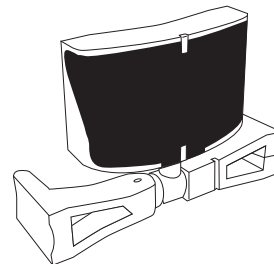

Quick Start Guide


1. Install software

Download the latest TrackIR installer from <http://trackir.com/download>. Run the installer and follow its prompts.




2. Plug in camera

Connect the device's cord to your computer's USB port.

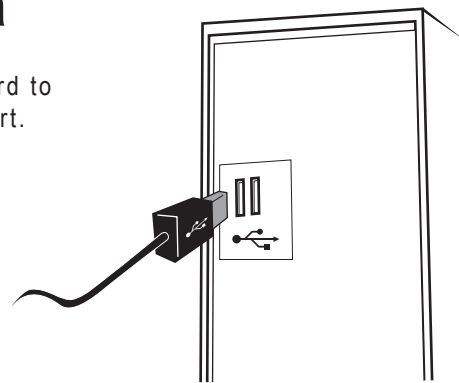


3. Set up the camera

Place the unit on your monitor, facing you.

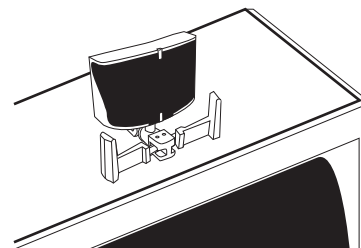


The device's stand can assume a variety of positions to best fit your monitor.

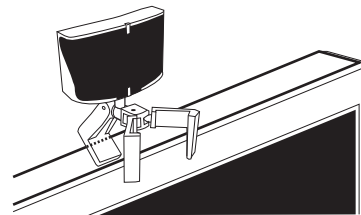


4. Attach the TrackClip

The spring steel clip slips easily onto a hat brim or headset.

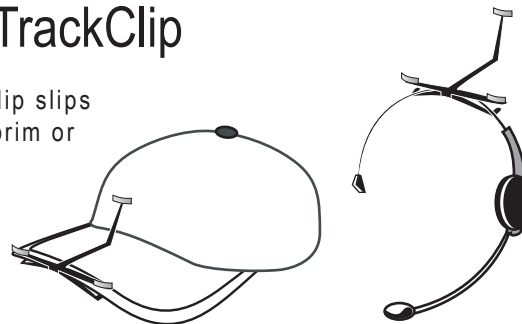


5. Adjust position

Position your TrackClip level with the camera...

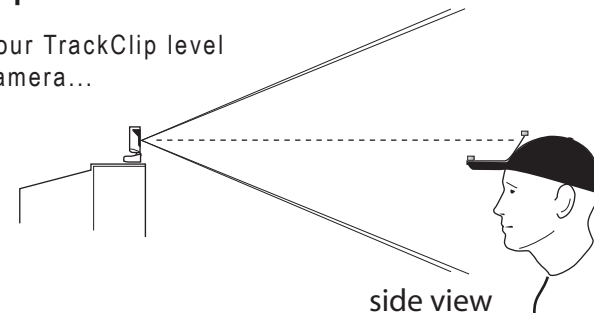

and in the center of its field of view, for the best performance.

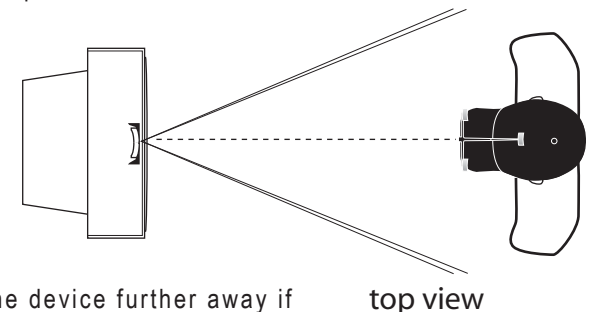

Position the device further away if you'd like more room to move around (we suggest somewhere between 2 and 6 feet).