




4. Suggestions and Warnings

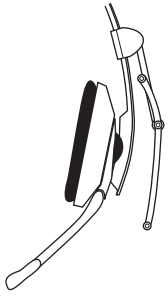


Optimal configuration

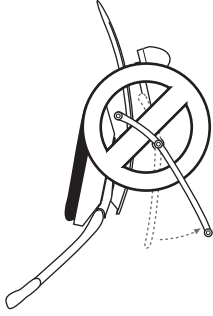

Less than ideal

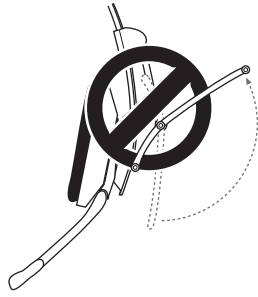

Warning:
Excessive twisting
may damage
internal wiring!

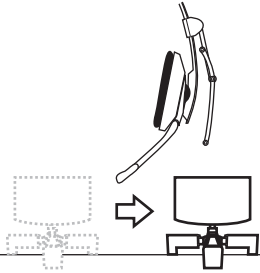


(Back view of monitor)

Optimally, position the TrackIR camera on the monitor so that it is centered with the TrackClip PRO's LEDs.

P-TR-110.1105

© 2011 NaturalPoint, Inc. All rights reserved.
All other company and/or product names are the trademarks of their respective owners.

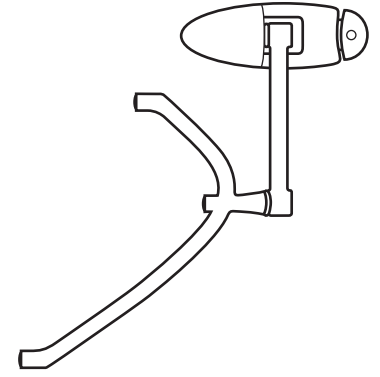


TrackClip™ PRO quick start guide



Basic Settings

TrackIR 5.x software:
Select "TrackClipPro" in the
Tracking Target box under the
Basic Settings section.

TrackIR 5.x software:

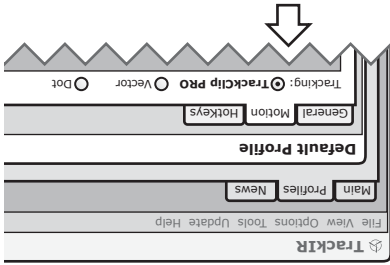


TrackIR 4.x software:
Select the "TrackClip
PRO" tracking option
inside your profile(s).

TrackIR 4.x software:

3. TrackIR Software Setup

Plug TrackIR™ into
TrackClip PRO's USB power tap.
Plug TrackClip PRO into
the computer's USB port.

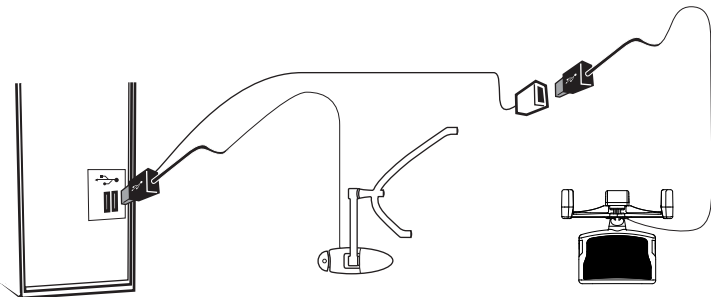


2. Connect to Computer


Attaches above
your left ear only.



Snap
shut

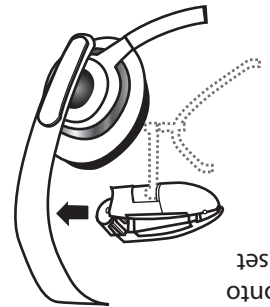

Slip onto
headset

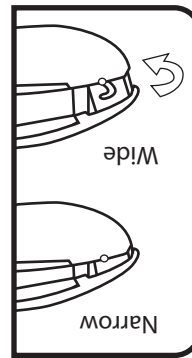

Note:
The clip
can expand

1. Attach TrackClip PRO